

## **Trouble Shooting Guide**

<b>Problems</b>	<b>Solutions</b>
Fails to turn on	A) Replace Batteries  B) Make certain Batteries are correctly positioned. Adjust the spring contact.
Fails to amplify sound or fails to cut out	Replace Batteries, when the voltage is too low, circuits will not operate correctly.
Static	A broad band microwave device, such as a cell phone is transmitting within 12.5m (40 ft.). Or there is HID (High Intensity Discharge) Lightning in the immediate area.
LED fails to light	Check switch or Batteries
Humming or Background Noise	The microphone is very sensitive. Ventilation or air conditioning fans, motors, car or truck traffic, and other "white noise" sounds will be amplified. Turn down volume to reduce this type of interference.